


PAREX USA STUCCO ASSEMBLIES


MEMBRANE "BANDAGES"

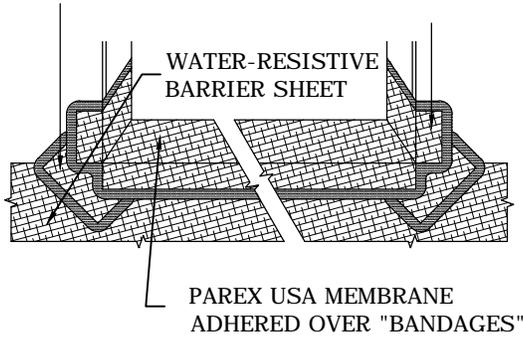

STEP 5:

INSTALLING PAREX USA SHEATHING JOINT TAPE


INSTALL THE PAREX USA FLASHING MEMBRANE AT THE ROUGH OPENING. MEMBRANE SHOULD LAP OVER THE PERVIOUSLY INSTALLED "BANDAGES" & WATER-RESISTIVE BARRIER SHEET.

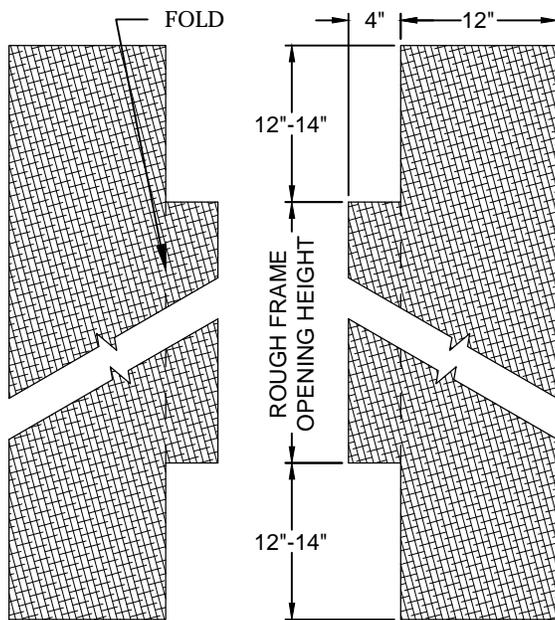

STEP 6:

CUTTING WATER-RESISTIVE BARRIER SHEET FOR JAMBS

CUT WATER-RESISTIVE BARRIER SHEET TO FIT ROUGH OPENING JAMB.

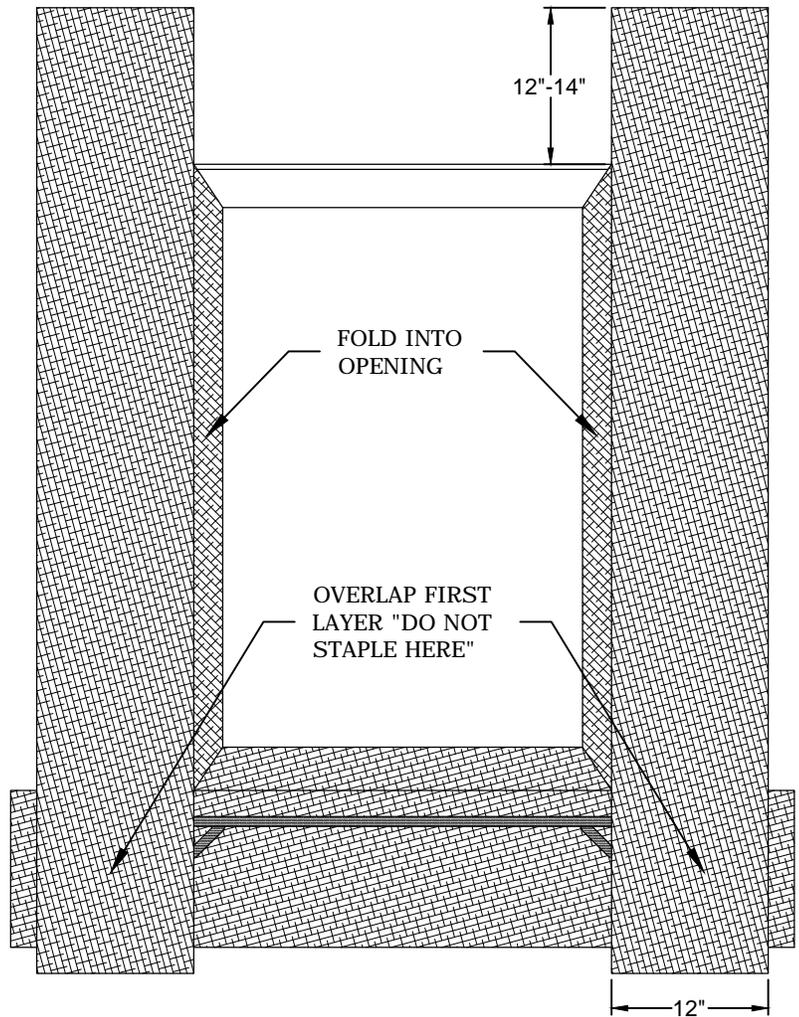

STEP 7:

INSTALLING WATER-RESISTIVE BARRIER SHEET AT JAMBS

FOLD WATER-RESISTIVE BARRIER SHEET INTO ROUGH OPENING. BOTTOM LEG MUST OVERLAP FIRST LAYER AS SHOWN. DO NOT STAPLE IMMEDIATELY BELOW THE SILL JAMB CORNERS.

G1.12B ROUGH WINDOW OPENING 2 OF 4

PAREX ARMOURWALL 100 & 300, LAHABRA FASTWALL 100 & 300, ELREY FASTWALL & FIBER-47, TEIFS ONE COAT & SCRATCH & BROWN

□ HE □ KRAK-SHIELD □ WATERMASTER

NOTE:

1. Stucco claddings and any cladding using a mortar bed require the use of a slipsheet installed over the Water-Resistive & Air Barrier Coating to prevent adhesion to the stucco.
2. Refer to Parex USA specifications specified basecoat products and thickness.

Disclaimer: The design specifications and construction shall comply with all local building codes and standards. Parex USA installation guidelines are for general information and guidance only and Parex USA specifically disclaims any liability for the use of this design, and for design engineering, or workmanship of any project. The assembly shall be designed to prevent condensation within the assembly. The designer and the user shall provide final drawings and specifications. Products shown other than those manufactured by Parex USA are shown for clarity of the Parex USA product only. Contact the Manufacturer for installation instructions.
Technical Support: 1-800-226-2424 www.parexusa.com